

 




Installation Instructions

Attention to the Installing Electrician

5102RVF E5102TRVF



Product Range

5102RVF - C-Bus Two Channel Voltage Free Relay (240V) E5102TRVF - C-Bus Two Channel Voltage Free Relay (110V)

Description


The 5102RVF/E5102TRVF Two Channel Voltage Free Relay is a C-Bus output device that provides two pairs of normally-open relay contacts for general switching applications.

Capabilities

The Two Channel Voltage Free Relay Unit comprises two relay switches, controlled by the C-Bus network. Manual override facilities are available, permitting stand alone operation in case of a power loss on the C-Bus network. A special programming mode can be used to configure the unit prior to connection of the mains supply. The unit isolates the mains power from the safe extra low voltage C-Bus network.

The Two Channel Voltage Free relay Unit differs from most other C-Bus devices, in that it does not draw any current from the C-Bus network when mains power is on.

5102RVF / E510TRVF C-Bus Two Channel Voltage Free Relay Units

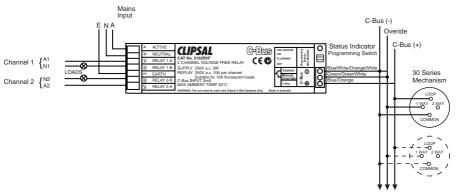

Status Indicator

An indicator shows the status of the C-Bus connection. This indicator is located under the extra low voltage cover of the unit.

| Indicator | Mains Power | C-Bus Communications |
|-----------|-------------|----------------------|
| ON | OK | OK |
| FLASHING | OK | ABSENT |
| OFF | ABSENT | UNKNOWN |

Manual Override Input

When the centre terminal of the extra low voltage connector is tied to C-Bus negative(-) terminal, both pairs of relay contacts are forced to the ON state. Any C-Bus command is ignored until the Manual Override Input connection to C-Bus negative is removed. Upon release of the Manual Override Input, both pairs of relay contacts are forced to the OFF state. At this time the C-Bus error detection/correction algorithms control the state of the outputs.

Stand Alone Operation

The C-Bus Two Channel Voltage Free Relay Unit can be operated as a 'stand-alone' device (no C-Bus connection) by means of the Manual override Input. In this case wiring between 0.2 and 1.5mm² (24-16AWG) of solid or stranded construction should be used, not exceeding one hundred metres in length for each terminal, C-Bus negative(-) or Override.

Programming Switch

 
The Two Channel Voltage Free Relay can be programmed without a mains connection. The unit can be connected to any operational C-Bus network capable of supporting two or more extra C-Bus units (current consumption in programming mode approximately 36mA). The Programming button may be pressed and held to enable the Programming mode. In this mode the unit will not be configured using C-Bus Toolkit Software, however the switched mains loads is not functional until programming is completed, and a mains connection established. The Programming Switch should not be used during normal mains operation of the unit.

Power Up Load Status

All C-Bus units have onboard non-volatile memory that stores the operating state of the unit in the event of a power loss. The Two Channel Voltage Free Relay Units by default, retains the current output status if C-Bus power is lost. Please refer to C-Bus Toolkit Software Help for information relating to the programming of Relay Output Units.

Connection to the C-Bus Network

it is recommended that Category 5 data cable be used, Clipsal catalogue number 5005C305BST STRANDED. Installation of the Two Channel Voltage Free Relay Unit requires connection to the unshielded twisted pair C-Bus Network Cable. This illustration below shows the recommended technique for cable termination giving the best electrical performance. Bootlace crimps may also be used to provide a highly reliable connection.



Programming Requirements

As with other C-Bus units, the Relay Units must be programmed to set their unique identification and the mode of operation on the C-Bus network. The C-Bus Toolkit Software is used to configure all operational parameters including the specification of control sources, and power up options. Please refer to C-Bus Toolkit Help for information relating to programming the Relay Output Units.

Power Surges

The mains voltage must be limited to the range specified for any unit which is mains powered. Each unit incorporates transient protection circuity and additional external power surge recommended that overvoltage equipment such as Clipsal 970 is installed at the switchboard.


Megger Testing

Do not megger test the relay unit. Test the load wiring only.

Important Warning

The use of any non C-Bus Software in conjunction with the hardware installation without the written consent of Schneider Electric or Clipsal Australia Pty Ltd may void any warranties applicable to the hardware.

| | 5102RVF | E5102TRVF | |
|-----------------------------|---|---------------------|--|
| C-Bus Operating Voltage | 15 - 36V d.c. | | |
| C-Bus Current | 0mA When mains power is on. | | |
| | 36mA Programming mode. | | |
| | The relay unit does not provide | | |
| | power to the C-Bus network. | | |
| Mains Supply | 192 - 264V a.c. | 90 - 130V a.c. | |
| Mains Frequency | 48 to 62 Hz | | |
| Main Power Consumption | <3W Maximum OFF state consumption | | |
| Rated Relay Load Current | 10A per channel | | |
| Relay Electrical Endurance | (operations at rated load current) | | |
| | 60,000 r | ninimum | |
| Electrical Isolation Rating | 3.5kv RMS for one minute | | |
| (Mains to C-Bus) | (opto-isolated UL recognised | | |
| | File No. | E54915) | |
| Operating Temperture | 0 - 50°C | | |
| C-Bus Side Connectors | Screw Terminals accommodate 6 x 0.2mm ² | | |
| Output Side Connectors | Spring Terminals accommodate 0.2 - 1.5mm ² | | |
| | (24 - 16 AWG) solid | d or stranded cable | |

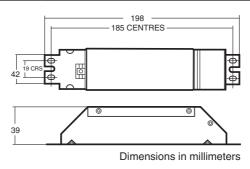

| Technical Support Contact Numbers | | |
|-----------------------------------|--|--|
| Australia | 1300 722 247 (CIS Technical Support Hotline) | |
| New Zealand | 0800 888 219 (CIS Technical Support Hotline) | |
| Northern Asia | 852 2484 4157 (Clipsal Hong Kong) | |
| South Africa | (011) 314 5200 (C-Bus Technical Support) | |
| Southern Asia | 603 7665 3555 Ext. 236 or 242 (CIS Malaysia) | |
| United Kingdom | 0870 608 8 608 (Schneider Electric Support) | |

Clipsal Australia Pty Ltd

A member of Schneider Electric

Contact us: clipsal.com/feedback

Technical Support Email: cis.support@clipsal.com.au

National Customer Care Enquiries:

Tel 1300 2025 25 Fax 1300 2025 56

clipsal.com

Clipsal Australia Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this instruction are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Clipsal Australia Pty Ltd. The identified trademarks and copyrights are the property of Clipsal Australia Pty Ltd unless otherwise noted. Technical Support email: techsupport.cis@clipsal.com.au